 


How to connect with computer to use PC CAM function

1. Download a WEB camera software of computer from the link below:

<https://www.bestguarderonline.com/download.asp>

Install the software




Install:

SPCA1628 PC Driver - InstallShield Wizard

Preparing Setup

Please wait while the InstallShield Wizard prepares the setup.

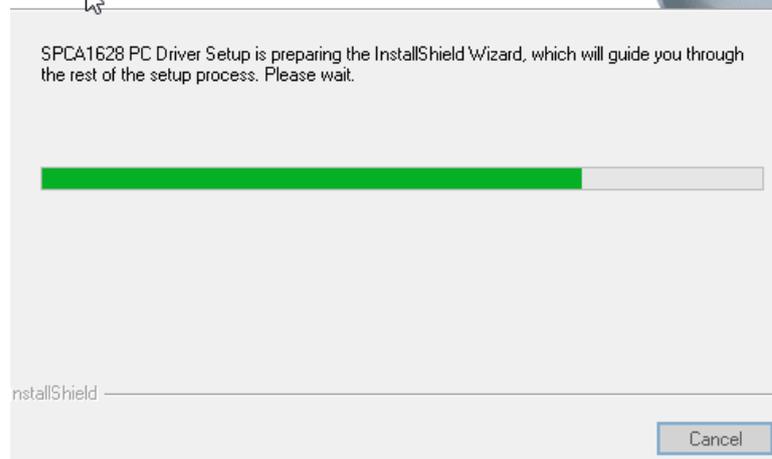

Please remember this computer path "C:\Program Files (x86)\SPCA1628"


SPCA1628 PC Driver - InstallShield Wizard

Setup Status


SPCA1628 PC Driver is configuring your new software installation.

Installing

C:\Program Files (x86)\SPCA1628\Uninstall.ico

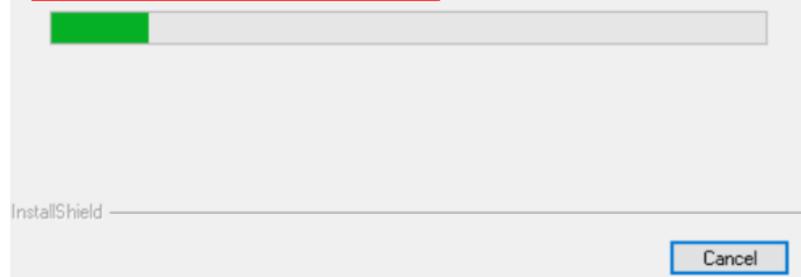


SPCA1628 PC Driver - InstallShield Wizard

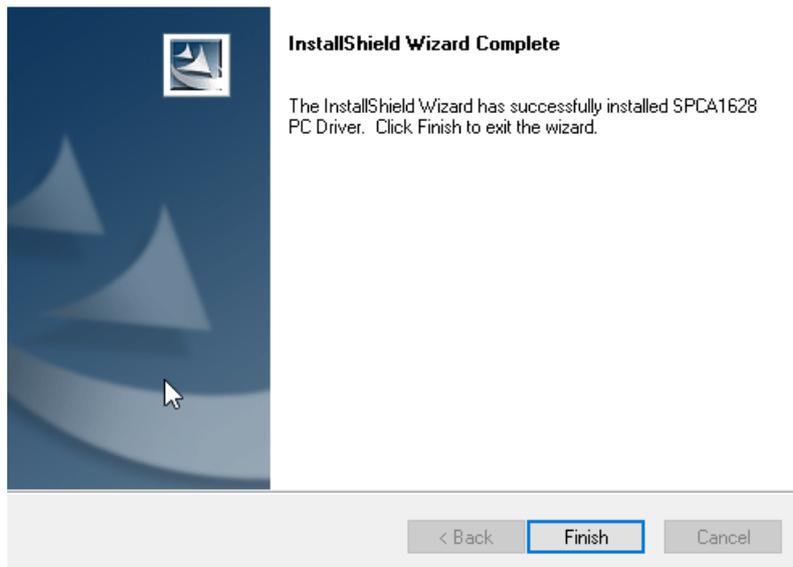


After the software installation is complete, please restart the computer!


2. Turn on the night vision device, enter the menu, choose "USB"- "PCCAM", then long press power button to turn off the device;

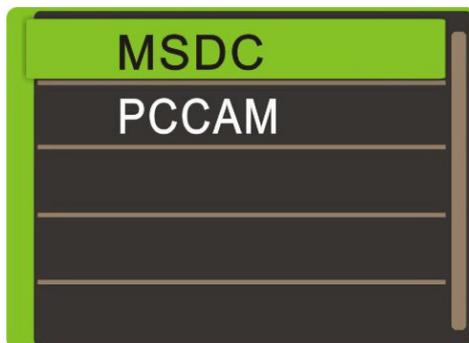

3. Connect compute and night vision device with USB cable, then you will see the "PCCAM" in the night vision device;

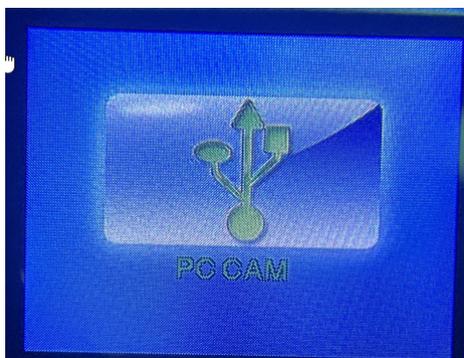


4. Open your camera software "amcap.exe" of the computer (please find the software icon from the computer path "C:\Program Files (x86)\SPCA1628");

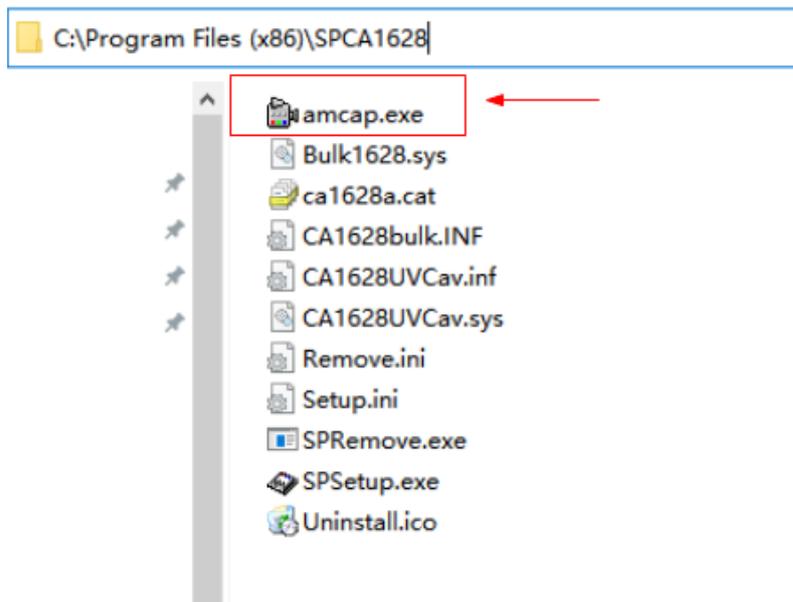

5. Please check whether these two places are ticked below:



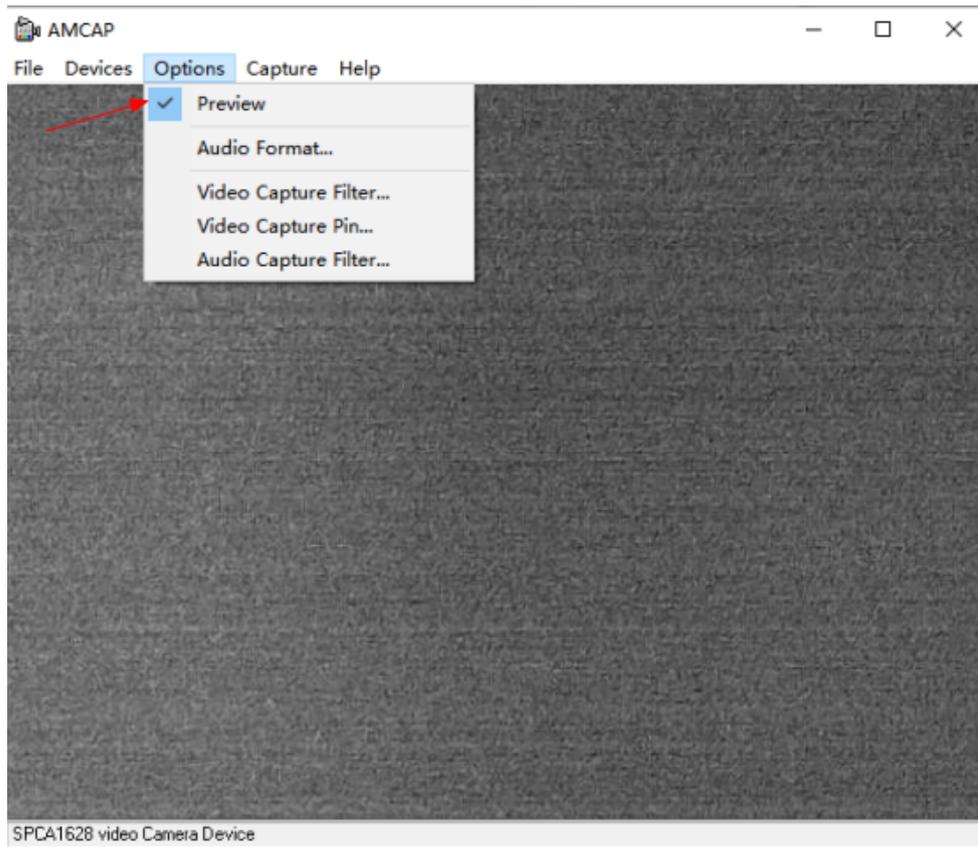

When connect successfully, you will see the screen of the night vision device turns white, and you will see the contents on your computer, please rotate the objective lens of the night vision device to focus on to see the objects clearly.

**If you have any problem of using PCCAM function or other need help, please feel free to contact us on our official website:
<https://www.bestguarderonline.com/>**

Hope this article can help you, thanks for choosing Bestguarder products!